


# FRONTIER DECK DRAIN INSTRUCTIONS

GRADE SUBSOIL WITH APPROPRIATE FALL TOWARD DRAIN AREA

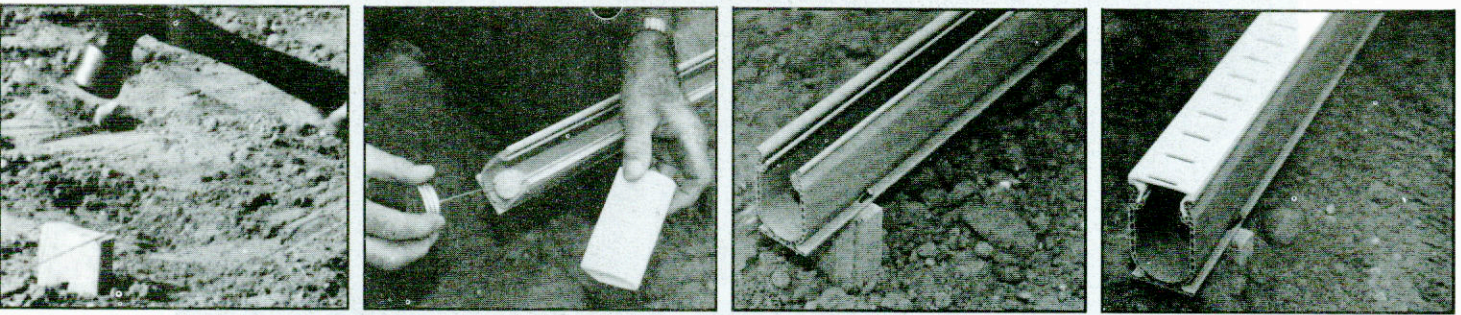


Using a string line, drive three inch stakes along path of drain every 30". Lay out fittings and cut base sections of drain to fit between. Using clear P.V.C. glue on both the drain and the couplings, weld them into one piece. Nail through the base flange of the drain into the 3" stakes that have been driven to grade. Before pressing top cap into lower section, cut the first piece in two, so that you will be able to half-lap all intersections. The rigid top section will assure alignment.

## EASY-FIT-COUPPLINGS



Even though the top grates are furnished with fittings and accessories, it is best that they be removed and replaced with a continuous top section.


## CONTINUOUS TOP CAP

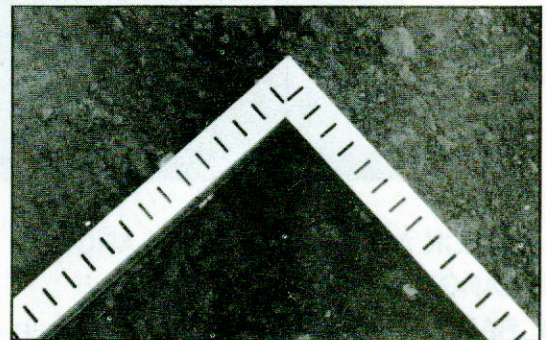

## SNUG FITTING CAP



## FLUSHING ACCESS

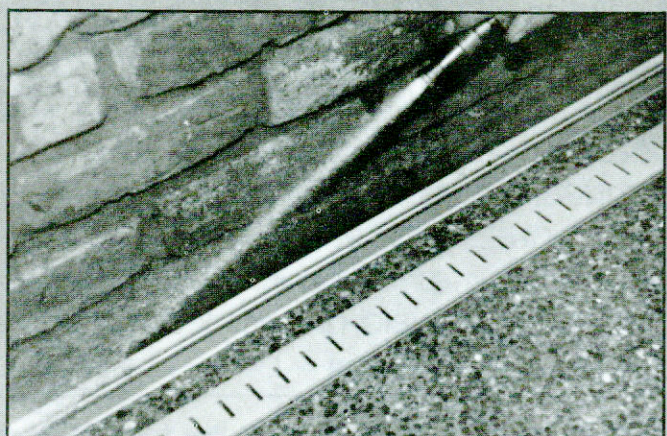

The easy-access drain cap is removed and the drain flushed with a garden hose. The spring like lips of the grate provide a snug fitting cap that may be replaced in years to come.